
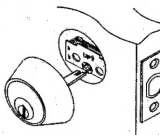
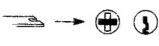
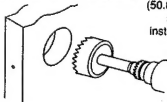
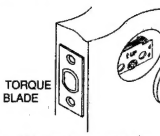
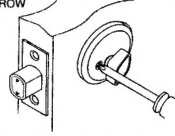
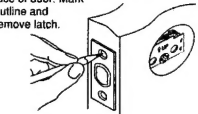


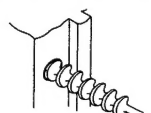


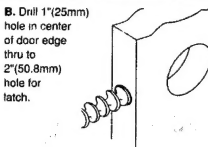
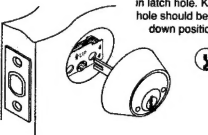
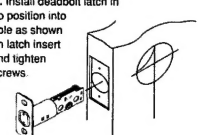
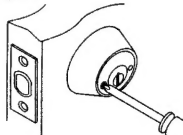
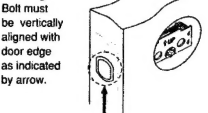

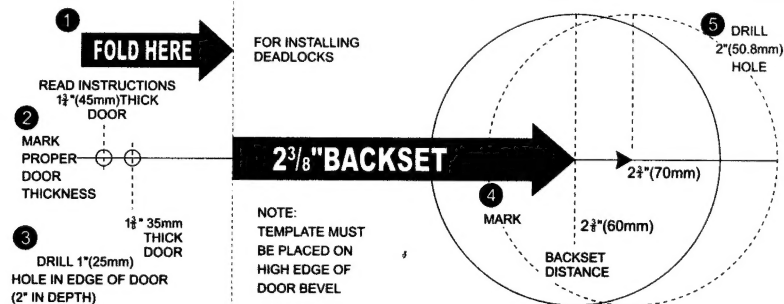


# INSTRUCTIONS FOR INSTALLATION OF SINGLE AND DOUBLE CYLINDER DEADLOCKS

FOR USE ON DOORS 1-3/8" TO 1-3/4" (35mm-45mm)

<b>1. MARK DOOR</b> <b>A.</b> Fold and apply template to high edge of door bevel and mark center of door edge as indicated on template at the desired height from the floor. 		<b>5. INSTALL EXTERIOR MECHANISM</b> <b>A.</b> Press cylinder side flush against door making certain the torque blade is properly positioned in latch crank. <b>B.</b> Tapped holes in mounting plate of exterior cylinder should be lined up with latch holes. Key hole should be in down position.  <b>TORQUE BLADE SHOULD BE HORIZONTALLY INSERTED INTO LATCH CRANK</b> 	
<b>2. DRILL HOLES</b> <b>A.</b> Drill thru door face as marked for lockset. It is recommended that holes be drilled from both sides to prevent splitting. Hole size is 2" (50.8mm) for standard installations. 		<b>6. INSTALL INTERIOR MECHANISM</b> <b>A.</b> Slide thumb bar and interior rosette onto torque blade.  <b>1" THROW</b> <b>B.</b> Insert machine screws through holes engaging holes in cylinder and tighten. 	
<b>3. INSTALL LATCH</b> <b>A.</b> Insert latch in hole keeping it parallel to face of door. Mark outline and remove latch. 		<b>INSTRUCTIONS FOR INSTALLING DOUBLE CYLINDER DEADLOCKS</b> Exterior half is fully assembled with exterior torque blade  <b>EXTERIOR TORQUE BLADE</b>  <b>NOTE: This assembly is placed through latch first.</b>	
<b>4. INSTALL STRIKE</b> <b>A.</b> Bore 1" hole 1" minimum deep for deadbolt. 		<b>A.</b> Install interior cylinder  <b>INTERIOR TORQUE BLADE</b>  <b>NOTE: The interior torque blade is inserted into the exterior blade.</b>	
<b>B.</b> Drill 1"(25mm) hole in center of door edge thru to 2"(50.8mm) hole for latch. 		<b>B.</b> Press interior assembly flush against door making certain the torque blade is properly positioned in latch hole. Key hole should be in down position. 	
<b>C.</b> Install deadbolt latch in up position into hole as shown on latch insert and tighten screws. 		<b>C.</b> Insert (2) two screws through countersunk holes engaging holes in exterior cylinder and tighten. 	
<b>D.</b> For round face deadbolt press flush to door edge. Bolt must be vertically aligned with door edge as indicated by arrow. 		<b>FOR INSTALLING DEADLOCKS</b> <b>2 3/8" BACKSET</b>  <b>NOTE: TEMPLATE MUST BE PLACED ON HIGH EDGE OF DOOR BEVEL</b>	



FOR OPTIONAL ADJUSTABLE LATCH - Backset is set at the factory at 2-3/8" (60mm). To adjust latch to 2-3/4" (70mm) position, hold rear of latch and rotate latch case 1/2 turn pulling front of latch forwarder until pin snaps into the 2-3/4" (70mm) position. To return the latch to the 2-3/8" (60mm) position repeat above, but push back with thumb on the latch bolt and push latch bolt and latch case in simultaneously.

